

Step 3 out of 3

Settings

1. This is the first screen you will see on your TV. Follow the instructions given.



2. When you are finished you can make a test call to be sure everything is working. Now the installation is finished!



3. Using a computer and a web browser, you can now go to <http://settings.myjoyce.com> to add more contacts for you to call.



Do you need more help?

Detailed manuals and more information are available on <http://www.myjoyce.com/faq/> or e-mail help@myjoyce.com

We'd love to help you!

Before you get started make sure these are included in the package:

Joicebox
Blackbox
USB Camera
Antenna
Two Power Adaptors
SCART cable

Also make sure you have:

Internet Connection
Subscription with myJoyce



More than words

getting started



This appliance complies with the current EU directives on meeting standards for the CE mark and thus meets the requirements for electrical and electronic equipment (EMC regulations, regulations and regulations for low voltage equipment). MyJoyce is a trademark or registered trademark of myJoyce AB in Sweden and in other countries. Other brand and product names are trademarks or registered trademarks of their respective holders. Information is subject to change without notice.

©2008 by myJoyce AB. All rights reserved.



Step 1 out of 3

Start Here!

Start by checking that you have a functioning internet connection. Your ISP will give you instructions for this. The Blackbox can be connected to the internet both with a network cable and with wireless connection (WLAN).

We recommend connection with a network cable.



5

Step 2 out of 3

Installation of Joice Package

1. Connect WLAN antenna or network cable (depending on internet connection) to the Blackbox
2. Connect the large SCART cable to the Blackbox and to the TV as seen in the illustration
3. Connect the USB Camera to the Blackbox and place on top of the TV
4. Connect Power Adapter to the Blackbox
5. Connect Power Adapter underneath the Joicebox



4

3

2

1



2



FOR BEST RESULT
If you have already connected another product to the TV's SCART socket, unplug it and replace it in the Joicebox's right-hand side SCART socket.

Turn on the TV!

A guide on your screen will help you proceed

